 


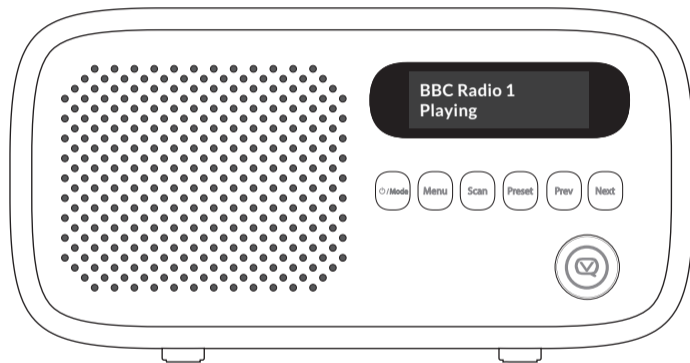

Dexter



USER GUIDE

KURZANLEITUNG | BEKNOPTE HANDLEIDING | GUIDE DE DÉMARRAGE RAPIDE
GUIA DE INICIO RAPIDO | GUIDA RAPIDA




Dexter

  
Portable DAB/DAB+ Digital & FM Radio

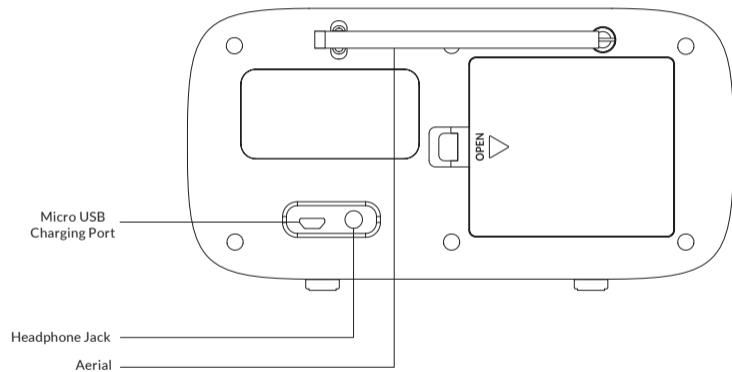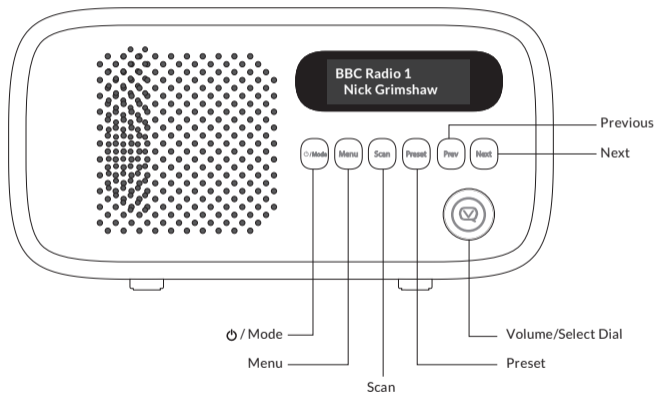

Power On/Off Dexter (Mains)

 

A black rounded rectangular device screen displaying the time and date in white text.

17:14:12
7-10-2019

1. Connect Dexter to mains power with the supplied plug.
2. The Clock & Date remain visible when Dexter is connected to mains power.
3. Turn Dexter on by pressing  .

A black rounded rectangular device screen displaying the text "POWER OFF" in white capital letters.

POWER OFF

4. Turn Dexter off by long pressing  .
 - a. This will put Dexter into Standby Mode, long press  again while in Standby Mode to turn Dexter off completely.

FR

Radio numérique DAB

1. Tournez le bouton de fonction sur « DAB ».
2. Appuyez sur « Scan » pour lancer une recherche automatique des stations disponibles.
3. Si vous avez déjà effectué une recherche complète, appuyez sur « Tune - » ou sur « Tune + » pour passer à la station précédente ou suivante.

DE

DAB-Digital-Radio

 
1. Stellen Sie den Funktionsknopf auf „DAB“.
2. Drücken Sie die Taste „Scan“, um mit dem automatischen Sendersuchlauf alle verfügbaren Sender zu finden.
3. Wenn Sie bereits einen Voll-Suchlauf durchgeführt haben, drücken Sie einfach die Tasten „Tune -“ oder „Tune +“, um den nächsten oder den vorherigen Sender einzustellen.

ES


Radio digital DAB

1. Mueva la rueda selectora de funciones a «DAB».
2. Pulse «Scan» para hacer una búsqueda automática de todas las emisoras disponibles.
3. Si ya ha realizado una búsqueda completa, tan solo tendrá que pulsar «Tune -» o «Tune +» para pasar a la emisora anterior o a la siguiente.

Power On/Off Dexter (Batteries)





17:14:12
7-10-2019

1. Insert 4x AA Batteries.
2. Turn Dexter on by pressing  .



POWER OFF

3. Turn Dexter off by long pressing  .
 - a. This will put Dexter into Standby Mode, which will still drain batteries, long press  again while in Standby Mode to turn Dexter off completely.

Digital Radio

A dark rounded rectangular screen with a lighter gray rectangular area in the center containing the text "DAB Mode".

DAB
Mode

1. When you first turn on Dexter it will automatically scan for all available digital stations.

A dark rounded rectangular screen with a lighter gray rectangular area. The text "Scanning..." is on the left and "0" is on the right. Below the text is a horizontal row of 12 empty square boxes.

Scanning... 0
□□□□□□□□□□□□

2. It is advisable to re-scan from time to time, to ensure you have all your available stations.

A dark rounded rectangular screen with a lighter gray rectangular area. The text "Scanning..." is on the left and "0" is on the right. Below the text is a horizontal row of 12 filled square boxes.

Scanning... 0
■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■

3. To re-scan, press **Scan** and Dexter will find all your available stations.

Press to adjust by 0.05MHz or long press to rapidly scan up or down.

FM Radio

A dark rounded rectangular screen with a lighter gray rectangular area in the center containing the text "FM Mode".

FM
Mode

1. Press  to switch from DAB to FM Radio.

A dark rounded rectangular screen with a lighter gray rectangular area in the center. The text "Scanning..." is on the left and "0" is on the right. Below the text is a progress bar consisting of 12 white rectangular segments, with the first 10 segments filled and the last 2 segments empty.

Scanning... 0

2. Auto-Scan to the next available station by pressing **Scan**.

 
 
A dark rounded rectangular screen with a lighter gray rectangular area in the center containing the text "99.15MHz" and "[No Radiotext]".

99.15MHz
[No Radiotext]

3. To re-scan, press **Scan** and Dexter will find all your available stations.


Press to adjust by 0.05MHz or long press to rapidly scan up or down.

Saving a Preset

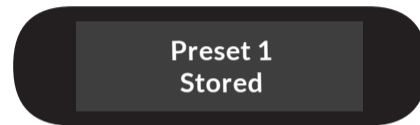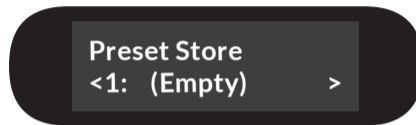

1. While listening to the station you wish to save as a preset long press **Preset**.
2. Use the **Prev** and **Next** or **Vol/Select Dial** to choose a preset number.
3. Press the **Vol/Select Dial** to save the station to that preset number.
 - a. You can either save to an empty preset or simply save over a previously stored station to replace it.

 Clock Set-up

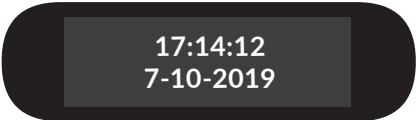


17:14:12
7-10-2019

1. The clock will automatically adjust when you first turn on Dexter as it receives date & time settings from the radio signal.
2. You can adjust the clock to display in 12hr or 24hr format.




DAB
< Clock Setup >

 - a. Press **Menu** and use **Prev** and **Next** or **Vol/Select Dial** to find "Clock Setup", then press **Vol/Select Dial**.
- b. Use **Prev** and **Next** or **Vol/Select Dial** to find "Set 12/24 hour" then press **Vol/Select Dial**.

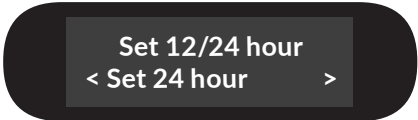


Set 12/24 hour
< Set 24 hour >

 
- c. Use **Prev** and **Next** or **Vol/Select Dial** to select either "Set 12 hour" or "Set 24 hour", then press **Vol/Select Dial**.
- d. To return to the main radio screen press **Menu**.

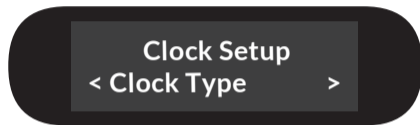

 3. If you prefer, you can set the date & time manually.
- Press **Menu** and use **Prev** and **Next** or **Vol/Select Dial** to find "Clock Type", then press **Vol/Select Dial**.


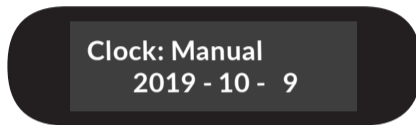


 - Use the **Prev** and **Next** or **Vol/Select Dial** to find "Clock: Manual", then press **Vol/Select Dial**.

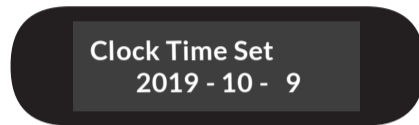



- Use the **Prev** and **Next** or **Vol/Select Dial** to set the date and time, after each section press **Vol Select Dial** to move to the next.
- To return to the main radio screen press **Menu Button**.

  Sleep Timer

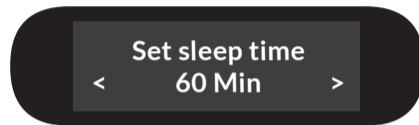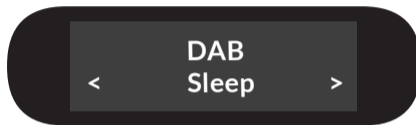

1. Dexter features a sleep timer which will automatically turn the radio off after a set time.
2. Press **Menu** and use **Prev** and **Next** or **Vol/Select Dial** to find "Sleep", then press **Vol/Select Dial**.
3. Use **Prev** and **Next** or **Vol/Select Dial** to choose your sleep time; 15, 30, 45, 60 or 90 minutes, then press **Vol/Select Dial**.
4. To return to the main radio screen press **Menu**.

  Adjusting the Backlight

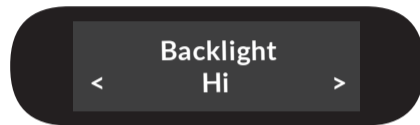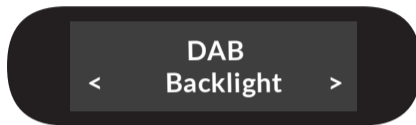

1. You can adjust the brightness of the display on your Dexter.
2. Press **Menu** and use **Prev** and **Next** or **Vol/Select Dial** to find “Backlight”, then press **Vol/Select Dial**.
3. Use **Prev** and **Next** or **Vol/Select Dial** to choose Hi, Mid or Low, then press **Vol/Select Dial**.
4. To return to the main radio screen press **Menu**.

Displaying Additional Station Information



BBC Radio 1 S58
Pop Music



BBC Radio 1 S58
BBC National DAB



BBC Radio 1 S58
12B 225.648MHz

1. When on DAB or FM Mode you are able to choose the information on the second line of the display, this includes; scrolling station text, date or time and battery level indication.

2. Long Press **Vol/Select Dial** repeatedly to cycle through display options.

Changing Languages

 
 


1. Press **Menu** and use **Prev** and **Next** or **Vol/Select Dial** to find "Language", then press **Vol/Select Dial**.



2. Use **Prev** and **Next** or **Vol/Select Dial** to choose your language, then press **Vol/Select Dial**.

Factory Reset

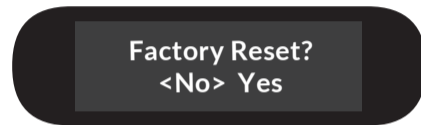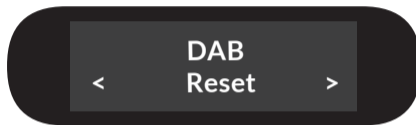

1. If you experience a fault with the radio, you may be advised to complete a factory reset, this will clear the memory of the radio and restart the product.

Please Note:- After a Factory Reset your preset stations will need to be re-saved.

2. Press **Menu** Use **Prev** and **Next** or **Vol/Select Dial** to find "Reset", then press **Vol/Select Dial**.

3. Use **Prev** and **Next** or **Vol/Select Dial** to choose "Yes" and press **Vol/Select Dial**.

EN

Environmental Disposal Information

Electrical and electronic products displaying the crossed out wheeled bin symbol must not be disposed of in general household waste. Take the product to a recycling facility that accepts electrical and electronic products. Check with your Local Authority for your nearest recycling centre.

VQ hereby declares that this Dexter is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. Please contact VQ for a copy of the Declaration of Conformity.

FR

Informations sur la mise au rebut écologique

Les produits électriques et électroniques marqués du symbole de la poubelle barrée ci-dessus ne doivent pas être jetés dans les ordures ménagères. Emmenez le produit jusqu'à un installation de recyclage qui accepte des produits électriques et électroniques. Vérifiez auprès des autorités locales la localisation du centre de recyclage le plus proche.

VQ déclare que ce Retro Classic est en conformité avec les exigences essentielles et autres dispositions pertinentes de la directive 1999/5 /EC. S'il vous plaît contacter VQ pour une copie de la déclaration de conformité.

DE

Informationen zur umweltverantwortlichen Entsorgung

Elektro- und Elektronikgeräte, die mit einem durchgestrichenen Abfallbehälter gekennzeichnet sind, dürfen nicht im normalen Hausmüll entsorgt werden. Entsorgen Sie das Gerät bei einer entsprechenden Recycling-Anlage für elektrische und elektronische Geräte. Die Adresse eines Recyclingcenters in Ihrer Nähe erhalten Sie bei Ihrer Stadt oder Gemeinde.

ES

VQ erklärt hiermit, dass dieses Retro Classic ist in Übereinstimmung mit den grundlegenden Anforderungen und anderen relevanten Bestimmungen der Richtlinie 1999/5/EC. Bitte kontaktieren Sie VQ für eine Kopie der Konformitätserklärung.

Información sobre desechos medioambientales

Los productos eléctricos y electrónicos que muestran el símbolo de un contenedor de basura con ruedas tachado, tal y como se muestra, no deben tirarse en la basura general del hogar. Lleva el producto a algún contenedor o lugar de reciclaje donde se acepten productos eléctricos y electrónicos. Consulta a las autoridades locales dónde está tu centro de reciclaje más cercano.

VQ declara que este Retro Classic cumple con los requisitos esenciales y otras disposiciones relevantes de la Directiva 1999/5/EC. Por favor, póngase en contacto con la VQ por una copia de la Declaración de Conformidad.



EN

Battery Safety Guidelines

- Batteries should not be tampered with by children.
- Never dispose of batteries in fire as they may explode.
- Batteries should not be exposed to excessive heat such as sunshine, fire or a naked flame.
- Disconnect Retro Classic during long periods of inactivity.
- Do not tamper with or pierce Retro Classic/battery.

Note: For battery operation, please remove the plug from the socket-outlet.

FR

Consignes de sécurité de la batterie

- Ne pas laisser des enfants jouer avec les piles.
- Ne jetez jamais les piles au feu car elles peuvent exploser.
- Les piles ne doivent pas être exposées à une chaleur excessive comme le soleil, le feu ni aux flammes.
- Retirez la Retro Classic en cas d'inutilisation prolongée.
- N'essayez pas d'ouvrir ou de percer la Retro Classic/batterie.

Remarque : Pour le fonctionnement de la batterie, s'il vous plaît retirer la fiche de la prise de courant.

DE

Sicherheitsrichtlinien für Batterien

- Batterien dürfen nicht von Kindern ausgewechselt werden.
- Batterien niemals ins Feuer werfen. Explosionsgefahr!
- Batterien sind vor übermäßiger Wärme/Hitze wie Sonneneinstrahlung, Feuer oder offene Flammen zu schützen.
- Wird das Radio längere Zeit nicht verwendet, Retro Classic herausnehmen.
- Metallkontakte der Retro Classic/Batterie dürfen nicht manipuliert werden.

Hinweis: Für den Batteriebetrieb, entfernen Sie bitte den Stecker aus der Steckdose.

ES

Indicaciones de seguridad sobre las pilas

- Las pilas no deben ser cambiadas por niños.
- No tires nunca las pilas en un lugar con fuego, ya que podrían explotar.
- Las pilas no deben exponerse a calor excesivo, como la luz del sol, llamas o fuego abierto.
- Desconecte la Retro Classic si no la va a usar durante un periodo de tiempo.
- No manipule o perforo la Retro Classic/batería.

Nota: Para la operación de la batería, retire el enchufe de la toma de corriente.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.





At VQ we put our heart and soul into all of our products, with British; design, engineering and support. We take pride in delivering products that we hope will give you years of listening pleasure.

We do also know that sometimes things can go wrong, or you just need a little extra help. That's why we're committed to you in offering an extended three year warranty, you just need to visit www.MyVQ.com/warranty to register your product.

In addition we offer UK based support on the phone or via email, you can get in touch seven days a week on:- 0333 1234 601 or support@MyVQ.com.



Need Help?



www.MyVQ.com



0333 1234 601



support@myvq.com