


Monty

USER GUIDE

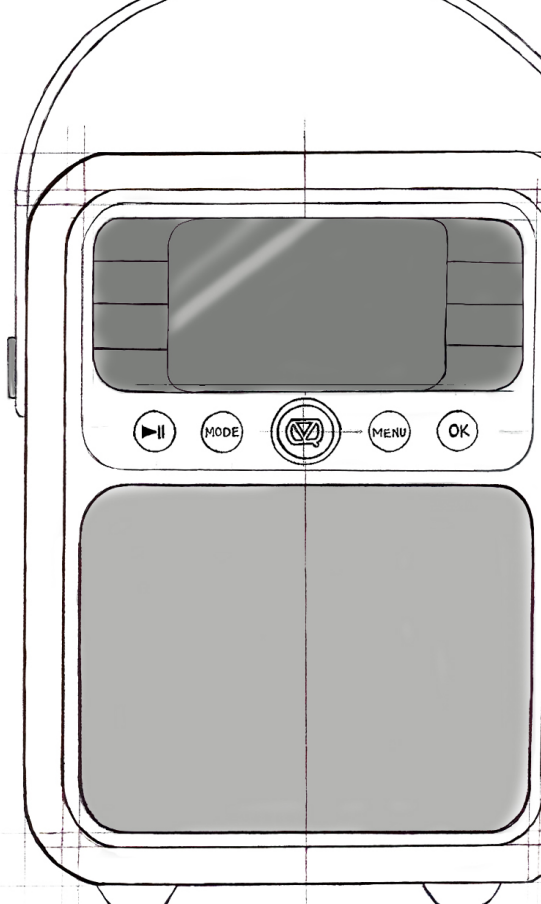

MyVQ.com

BORN IN
Britain



Contents

Contents	2
Basic Features	3-4
Power On/Off Monty	5
DAB Radio	6
FM Radio	7
Bluetooth	8
Saving Presets DAB/FM	9
To Recall a Preset	10
Setting an Alarm	11-13
Snooze or End a Sounding Alarm	14
EQ Setup	15-16
Clock Settings	17-18
Setting the Clock and Date manually	19-22
Sleep	23
To Cancel the Sleep Timer	24
Screen Brightness / Backlight	25
Language	26
Changing the Display Information Screen	27
Troubleshooting	28
Factory Reset	29
Contact Us	30



Power On/Off



Play / Pause

MODE

Mode

MENU

Menu

OK

Select / Enter



Volume Decrease



Volume Increase




Previous / Next





Presets

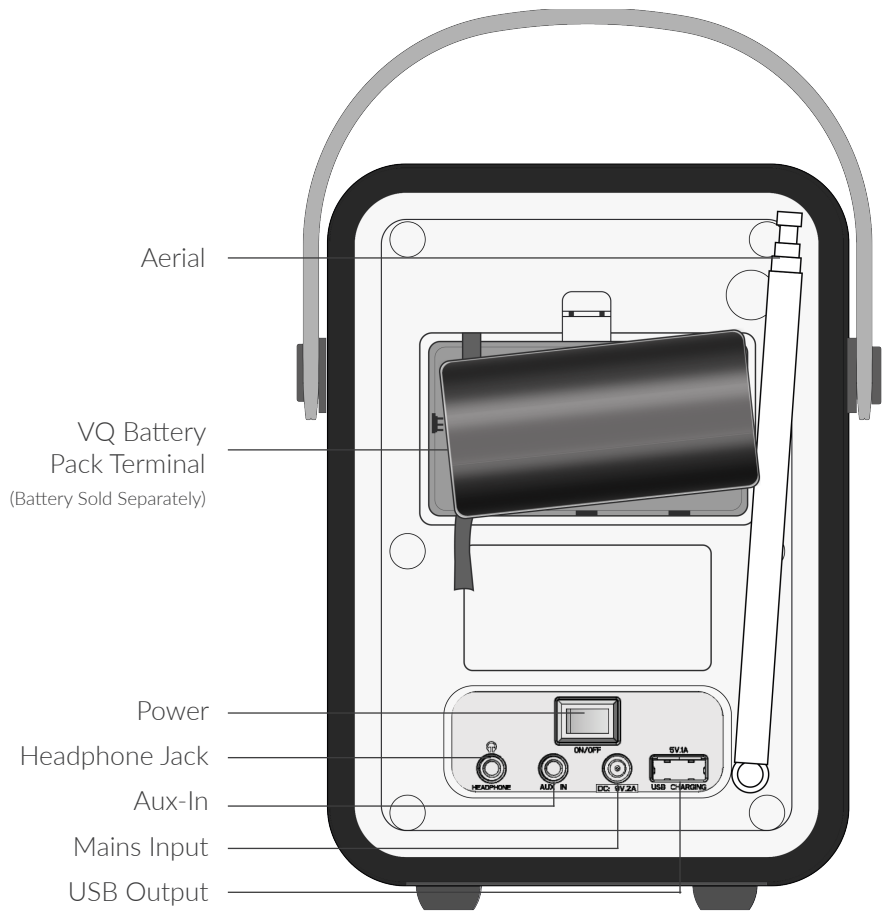


Alarm



Power On/Off Monty

1. Connect Monty to the mains with the supplied plug and Switch the Rocker Switch on the back of the Monty to **ON**.
2. The Clock and Date remain visible for your convenience when Monty is connected to mains power.
3. Turn on your Monty by pressing .
4. Put your Monty into Standby by pressing .
5. You may also wish to insert the compatible VQ rechargeable battery pack (sold separately).

1.

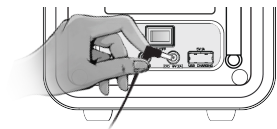

2.



3.



4.



DAB Radio

1. The first time you turn Monty on a full scan will automatically find all available digital radio stations.
2. If you wish to re-scan for available stations, press **Menu** and navigate to “Full Scan” using the **< & >** buttons. Press **OK** button to start a scan.
3. Once your available stations are found you can navigate between them by pressing **< & >** buttons.

1.



2.



3.



 
FM Radio

1. Press **Mode** to select FM Radio.
2. To tune to your preferred station, use the **< & >** buttons, short-press for fine tuning or long press for auto-scan.

1.




2.



Bluetooth

You can listen to any content on your phone, tablet or other smart device via Bluetooth.

1. Press **Mode** to select Bluetooth.
2. While “Pairing” is shown on the screen scan for Bluetooth devices on your smart device.
3. Connect to “Monty” and listen to any of your own content.

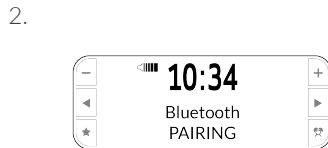


Saving Presets DAB/FM

You can save separate presets for Digital and FM Radio, with 60 in total.

1. Press and hold ★ when tuned to station.
2. Use < & > buttons to pick an available preset.
3. Press the **OK** button to confirm and save the preset.

 You can either save to an empty preset or simply save over a previously stored station to replace it.



To Recall a Preset

1. Press (do not hold) ★ button.
2. Use < & > buttons to select your preset.
3. Press the **OK** button to listen to the preset.

1.




2.




 
3.



Setting an Alarm

 
To set an alarm, press  (1x for Alarm 1 or 2x for Alarm 2) – then all navigation is completed with **< & >** buttons, use **OK** button to select and move to the next step.

1. Press  Button (1x for Alarm 1 or 2x for Alarm 2).
2. Use **< & >** buttons to turn Alarm On and Off.
3. Press the **OK** button to progress.
4. Use **< & >** buttons to select your alarm preference – Daily, Once, Weekends, Weekdays.
5. Press the **OK** button to progress.
6. Use **< & >** buttons to set the hour of alarm.



Setting an Alarm (cont.)

7. Press the **OK** button to confirm.
8. Use **< & >** buttons to set the minutes of the alarm.
9. Press **OK** button to confirm.
10. Use **< & >** buttons to choose type of alarm – DAB, FM, BEEP 1 or BEEP 2.
11. Press **OK** button to confirm.
12. Use **< & >** buttons to choose volume of alarm.



Setting an Alarm (cont.)

13. Press **OK** button to confirm.

14. Use **< & >** buttons to choose your snooze time.

15. Press the **OK** button to confirm.

16. Your Monty will display **Alarm Saved** and an Alarm Icon will display on the screen.

13.



14.





15.




16.



Snooze or End a Sounding Alarm

Whilst the alarm is sounding press the  or press the  button twice to cancel the alarm.

Whilst the alarm is sounding, press the  button to snooze the alarm.

 
You can also snooze the alarm by pressing **OK, MODE, PLAY/PAUSE, ★, < & >** buttons or **- & +**.



EQ Setup




You can tailor the acoustics of Monty with the EQ Setup.

1. Press **Menu**.
2. Use the **< & >** buttons to navigate to EQ Setup.
3. Press **OK** button to confirm.
4. Use the **< & >** buttons to choose from a range of music genre presets or enter the MyEQ menu.
5. Press **OK** button to confirm.



EQ Setup (cont.)

   - In MyEQ Menu - Use the **< & >** buttons to select either Bass or Treble.
- Press **OK** button to confirm.
- Use **< & >** buttons to adjust Bass and Treble.
- Once you're happy with the MyEQ settings Press the **OK** button to confirm.
- To return to the main radio screen press **Menu**.



Clock Settings

The clock display used in standby mode and when the radio is in use can be set to 12 or 24 hour format.

1. Press **Menu**.
2. Use the **< & >** buttons to navigate to Clock Setup.
3. Press **OK** button to confirm.
4. Use the **< & >** buttons to select Set 12/24 hour.

1.



2.



3.



4.



 
Clock Settings (cont.)

5. Press **OK** button to confirm.
6. Use the **< & >** buttons to select 12 Hour or 24 Hour.
7. Press **OK** button to confirm.
8. To return to the main radio screen press **Menu**.

5.



6.



7.



 
8.



Setting the Clock and Date manually



The Monty will set its clock automatically using DAB radio signal, if no DAB signal is available then you can change the date and time manually.

1. Press **Menu**.
2. Use the **< & >** buttons to navigate to Clock Setup.
3. Press **OK** button to confirm.
4. Use the **< & >** buttons to select Clock Type.
5. Press **OK** button to confirm.



Setting the Clock and Date manually (cont)

  6. Use the **< & >** buttons to select Clock: Manual.
7. Press **OK** button to confirm.
8. Use **< & >** buttons to select date and time, pressing the **OK** button in between Year, Month, Day, Hour and Minutes.
9. To return to the main radio screen press **Menu**.



Setting the Clock and Date manually (cont)

To change back to the DAB radio clock please follow the instructions below:

1. Press **Menu**.
2. Use the **< & >** buttons to navigate to Clock Setup.
3. Press **OK** button to confirm.
4. Use the **< & >** buttons to select Clock Type.

1.



2.



3.



4.



Setting the Clock and Date manually (cont)

5. Press **OK** button to confirm.
6. Use the **< & >** buttons to select Clock: Radio.
7. Press **OK** button to confirm.
8. To return to the main radio screen press **Menu**.

5.



6.



7.



8.



Sleep

Sleep timer lets you decide how long you want to listen to the radio for and can be set between 15 and 90 minutes.

1. Press **Menu**.
2. Use the **< & >** buttons to navigate to Sleep.
3. Press **OK** button to confirm.
4. Use the **< & >** buttons to select duration; 15, 30, 45, 60 or 90 minutes.
5. Press **OK** button to confirm.
6. To return to the main radio screen press **Menu**.

The screen displays a countdown, showing how many minutes are left on the timer before ultimately turning off e.g. S30 when 30 minutes has been selected.

1.



2.



3.



4.



5.



6.



To Cancel the Sleep Timer

1. Press **Menu**.
2. Use the **< & >** buttons to navigate to Sleep.
3. Press the **OK** button.
4. Use the **< & >** buttons to select **Off**.
5. Press **OK** button to confirm.
6. To return to the main radio screen press **Menu**.

1.



2.



3.



4.



5.



6.



Screen Brightness / Backlight

Monty has 3 screen brightness settings – Low, Medium and High to adjust to your personal choice.

1. Press **Menu**.
2. Use the **< & >** buttons to navigate to Backlight.
3. Press the **OK** button to confirm.
4. Use the **< & >** buttons to select your desired brightness setting.
5. Press the **OK** button to confirm.
6. To return to the main radio screen press **Menu**.

1.



2.



3.



4.



5.



6.



Language

You may wish to change the language on your Monty.

1. Press **Menu**
2. Use **< & >** buttons to navigate to Language.
3. Press the **OK** button to confirm.
4. Use the **< & >** buttons to select to choose between language options.
5. Press the **OK** button to confirm.
6. To return to the main radio screen press **Menu**.

1.



2.



3.



 
4.



5.



6.



Changing the Display Information Screen

Changing the DAB display information


If the Monty is in DAB mode, press and hold the **OK** button to select different information screens to show on the display, continue pressing and holding in short bursts to cycle through different information screens such as Signal Strength, Program Type, Station Name/Region, Frequency, Signal Error, Data Rate, Power Type (battery charge %), Date and Radio Text. Please note when you change channel or turn the radio off the screen will revert to Radio Text.

Changing the FM display information

If the Monty is in FM mode, press and hold the **OK** button to select different information screens to show on the display, continue pressing and holding in short bursts to cycle through different information screens such as Program Type, Frequency, Stereo/Mono, Power Type (battery charge %), Signal Strength, Date and Radio Text. Please note when you turn the radio off the screen will revert to Radio Text.

Troubleshooting

Make sure that your Monty is connected to the mains power.

To use the features in the Menu button, your radio needs to be turned on by pressing the  button.

Make sure that you have connected the cable to the correct power socket on the rear of your Monty. The power socket is on the right next to the USB socket.

If using away from mains – has the Monty battery run out of battery power? Try recharging.

If you experience a fault with the radio, you may be advised to complete a factory reset, this will clear the memory of the radio and restart the product.

Factory Reset

Please Note: - After a factory reset your preset stations will need to be re-saved.

1. Turn the radio on.
2. Press **Menu**.
3. Use the **< & >** buttons to navigate to Reset.
4. Press **OK** button to confirm.
5. Use the **< & >** buttons to change to Yes.
6. Press **OK** button to confirm.
7. The radio will then reboot - all settings will be wiped, a first-time scan will be performed.

1.



2.



 
3.



4.




5.



6.



 7.



Contact Us

Still not working? Please contact our support team it might be something as simple as a replacement plug.

Need more Help?

If you need a little more help with the set-up or anything related to your Monty, don't worry we are ready to answer your questions or do what we can to help. Please do get in touch

Email: Support@myvq.com

Website: www.MyVQ.com

CE & WEE

Waste electrical and electronic products should not be disposed of with household waste. Where facilities exist to do so, please recycle. Check with your Local Authority for further recycling advice.



Need Help?



www.MyVQ.com



support@myvq.com