
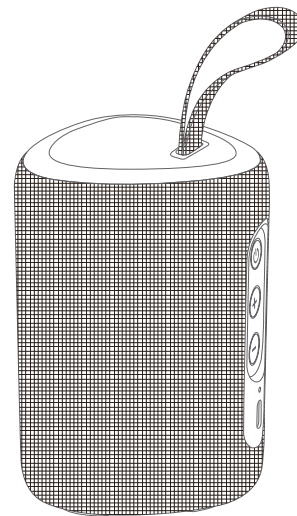


SXL4020 & SXL4021 Manual 850*110mm




Sinox Europe A/S
Troensevej 11, DK-9220 Aalborg



SXL4020 / SXL4021
MANUAL


BLUETOOTH SPEAKER AND ACCESSORIES

A. Bluetooth speaker
B. USB charging cable
C. User manual

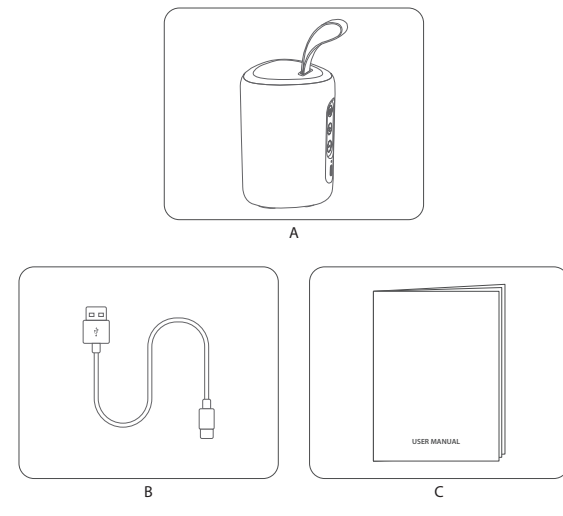

01

BASIC FUNCTIONS

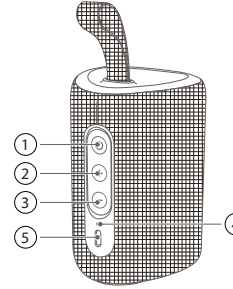


02

- ① **Power on/off;** Long press for 2S: Power on/off; Short press once: Play/Pause; Mute/Unmute; Answer an incoming call/End a call
- ② **Volume Control:** Short press twice: Disconnect bluetooth pairing. Short press once: Turn the volume up. Long press for 2S: Next song. Short press once: Turn the volume down. Long press for 2S: Previous song.
- ③ **Charging port:** USB-C charging port.
- ④ **Indicator lights:** BT Light/Charging Light/Low Battery Light.

OPERATION GUIDE

1. Power On/Off
Long press "⏻" button for 2S to power on, long press it for 2S again to power off.

2. Bluetooth Connection
It will enter to Bluetooth mode after power on, and the blue indicator will flash. Then choose "SXL4020 / SXL4021" from your devices list. You will hear a voice prompt once it is connected, and the blue indicator will stay on. Then you can start to play your music. Short press "⏻" button three times to disconnect Bluetooth.

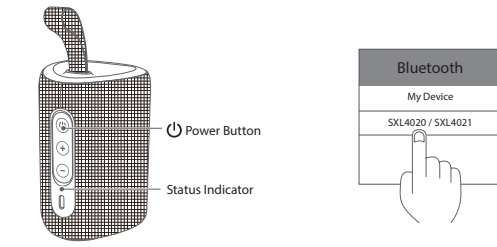


03

3. Volume Control
• Volume Control/Previous and Next Song Control:
Short press "+" to increase volume; Long press for 2S to play next song; When it reaches to the maximum volume, you will hear a "Beep" voice prompt.
Short press "-" to decrease volume; Long press for 2S to play previous song;
Short press "⏻" to pause playing, press again to resume in Bluetooth mode;

OPERATION GUIDE


4. TWS Connection
1) Power on two "SXL4020 / SXL4021" speakers, they will enter to Bluetooth mode.
2) Short press each of their "⏻" button twice, two speakers will go to TWS pairing and you will hear a voice prompt once they connected successfully. The master speaker's blue indicator will keep flashing, the sub-master speaker's blue indicator will stay on.
3) Choose "SXL4020 / SXL4021" from your device list to connect the master speaker. You will hear a voice prompt once it is connected, and the blue indicator will stay on. After the two models successfully connected with your phone, you can play music on both of them at the same time.
4) Short press twice of each of their "⏻" button again to disconnect TWS pairing.

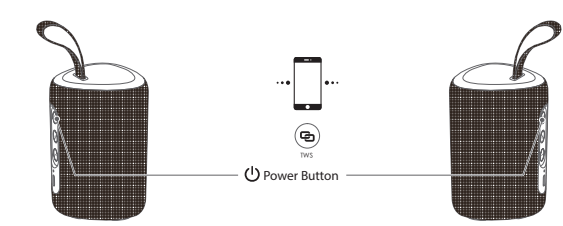

04

OPERATION GUIDE

5. Handsfree call
When you have a call, speaker will enter into handsfree status automatically in bluetooth connected status. When you receive an incoming call, short press the power button once to answer the call and short press it again to hang up. Short press the power button twice to reject the call.

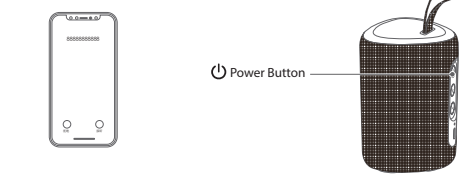


05

OPERATION GUIDE


6. Power Saving
Under below situation, the speaker will power off to save battery power:
In BT mode, without any connection with any device for 10 minutes;
Long press "⏻" for 2-3 seconds to power on again if the speaker powered off without any connection or playing.

7. Charging
Important notice:
• Don't use no safety-certified adapter
• Use 5V/1A or above 1A adapter
1. Please charge the speaker when hearing the low battery prompt voice.
2. Red indicator will be on when charging, and it will be off after full charged.

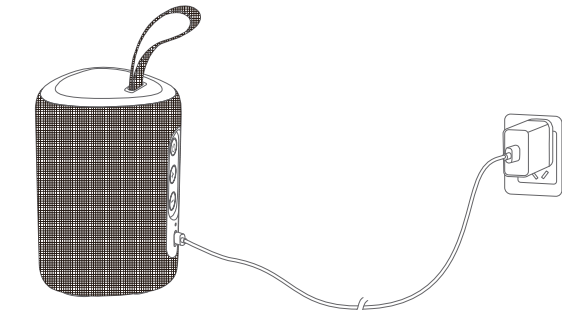

06

FUNCTION INSTRUCTIONS

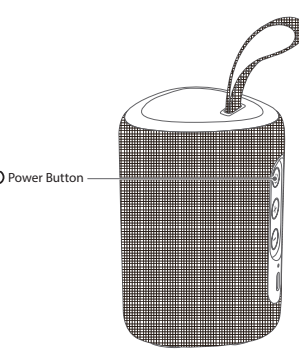

07

Power On Status	Blue indicator will be on when power on, and enter to Bluetooth mode automatically, then the blue indicator will flash quickly (in Bluetooth searching status).
Bluetooth Status	Technical light keeps blue when bluetooth is connected. Blue indicator keeps flashing if your Bluetooth devices out of range or disconnected, then the speaker will be in searching status.
Charging Status	Red indicator will be on while charging and be off when charging
Low battery	Red indicator will flash quickly when the battery is low.

SPECIFICATIONS

Product Name	Sinox Lifestyle
Model Name	SXL4020 / SXL4021
Bluetooth Version	5.0
Battery Capacity	3.7V/1200mAh
Playing Time	10~12 hours(50% Volume)
Charging Time	2 hours
Speaker Unit	6W/4Ω
Charging Current	5V ≡ 1A
Product Size	75 x 75 x 110mm
Product Weight	266g±50

08

FREQUENTLY ASKED QUESTIONS


Q1: What kind of charger should we use for the speaker?
A: All common USB-C chargers can be used, while we suggest the ones 5V/2A or above 2A.
Q2: What if there is noise or discontinuous sound during playing?
A: The speaker can be normally used within 10m under no obstruction environment. If it is beyond 10m or with obstruction, there might be noise or discontinuous sound.
Q3: Why the speaker power off automatically after power on but no Bluetooth disconnection?
A: When there is no bluetooth pairing in 10 minutes, the speaker will shut down automatically to reduce power consumption.
Q4: Why does the speaker cannot connect the once-paired cellphone?
A: First, remove the speaker's paired name from the cellphone's Bluetooth List and then restart pairing.
Q5: The speaker cannot be started up in a normal situation.
A: Please plug in the charger and try in a few minutes or try to long press power button 10-30s to reset.

Notes:
1. Please read this manual carefully before use and keep it properly.
2. For the first use, please fully charge the product.
3. Pls use certified adapter that has passed national safety certification.
4. If you do not use the product for a long time, be sure to charge it once within a month at least to maintain its performance.
5. Do not use this product in an extremely cold or hot environment, such as temperature beyonds the range of 5°C-35°C. If use it beyond the above range, the product may stop automatically to protect the internal circuit.
6. When charging it in a high temperature environment, the product may automatically stop charging to protect the battery. At this time, the charging indicator usually flashes quickly to indicate that the charging environmental temperature or the product internal temperature is too high.
7. Storage environment temperature: 5°C ~ 35°C RH<70% (recommended 25°C±5°C).


Important safety instructions:
1. Do not disassemble or repair this speaker personally, otherwise it may cause product damage or personal injury.
2. Do not use it in dusty, humid, dry, and high-temperature environment.
3. Do not place this product near a heat source, or a place with direct sunlight, a lot of dust, or mechanical vibration.
4. In order to reduce the risk of fire, please do not cover this product with newspapers, tablecloths, curtains etc. during use.
5. If the product has a waterproof feature, please do not exceed the nominal parameter range when using it.
6. When the product is damaged such as the power cord or plug is damaged, liquid enters or objects fall into the device, unable to operate normally or falls, it must be repaired.
7. When the product is fully charged, do not connect it to the charger for further long time charging.
8. The maximum ambient temperature should not exceed 40°C.

*This speaker supports mobile phones/tablets/PCs etc. Here this User Manual is illustrated base on mobile phones.

09




Sinox Europe A/S
Troensevej 11, DK-9220 Aalborg

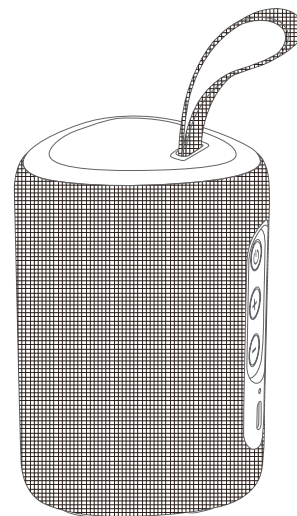

SXL4020 / SXL4021
MANUAL


INKLUDERER

A: Bluetooth* højttaler
B. USB opladningskabel
C. Brugermanual

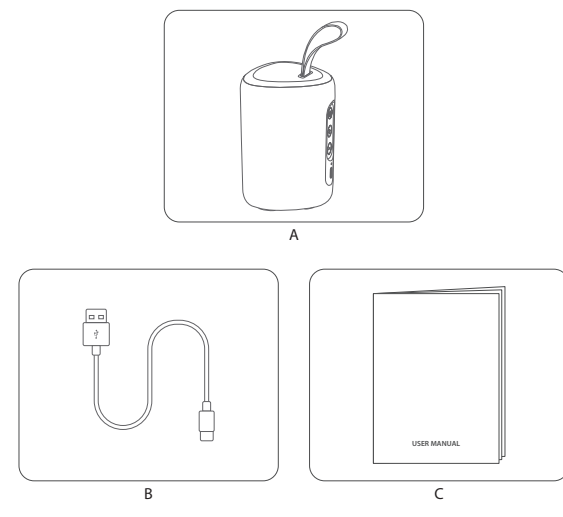

01

BASALE FUNKTIONER

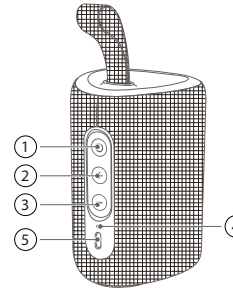


02

- ① **Hold inde i 2-3 sekunder:** Tænd/sluk højttaleren
Kort tryk: Play/pause, mute/unmute, besvar/afslut opkald
To korte tryk: Afvis opkald, TWS-forbindelse
Tre korte tryk: Afbryd Bluetooth*-forbindelse
- ② **Kort tryk:** Højere lydstyrke
Hold inde i 2-3 sekunder: Skift til næste sang
- ③ **Kort tryk:** Lavere lydstyrke
Hold inde i 2-3 sekunder: Skift til forrige sang
- ④ **Opladningsport:** USB-C opladningsport
- ⑤ **LED-indikator:** Bluetooth*-lys, opladningslys, lavt batteri-lys

BETJENINGSINSTRUKTIONER

1. Sluk/tænd
Hold "⏻"-knappen inde i 2-3 sekunder for at tænde eller slukke højttaleren.

2. Bluetooth*-tilstand
Når højttaleren tændes, går den i Bluetooth*-parringstilstand og LED-indikatoren blinker med blåt lys. Vælg "SXL4020 / SXL4021" på din enheds Bluetooth*-liste. Når der er forbindelse, siger højttaleren en kort lyd og LED-indikatoren lyser konstant blåt. Du kan nu afspille din musik. Tryk på "⏻"-knappen tre gange for at afbryde Bluetooth*-forbindelsen Bluetooth connection.

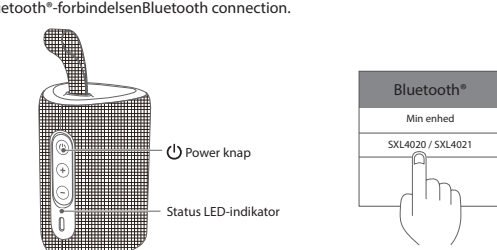


03

3. Lydstyrke
• Lydstyrkekontrol / Forrige og næste sang kontrol
Tryk kort på "+" for højere lydstyrke. Hold "+" inde i 2-3 sekunder, for at afspille den næste sang. Når lydstyrken når sit maksimum, siger højttaleren en kort bip-lyd. Tryk kort på "-" for lavere lydstyrke. Hold "-" inde i 2-3 sekunder, for at afspille den forrige sang.
Tryk kort på "⏻" for at pause eller genoptage afspilning ved Bluetooth*-tilstand
Tryk kort på "⏻" for at pause eller genoptage afspilning ved Bluetooth*-tilstand

BETJENINGSINSTRUKTIONER


4. TWS-forbindelse
1) Tænd to højttalere, så de går i Bluetooth*-parringstilstand.
2) Tryk kort to gange på en af højttalerens "⏻"-knap. De to højttalere vil forbindes med en kort lyd. Master-højttaleren vil blinke med blåt lys, mens submaster-højttaleren vil lyse med et konstant blåt lys.
3) Vælg "SXL4020 / SXL4021" på din enheds Bluetooth*-liste, for at forbinde med de to højttalere. Herefter vil højttalerne sige en kort lyd og du kan nu afspille fra begge højttalere på én gang.
4) Tryk kort to gange på en af højttalerens "⏻"-knap for at afbryde TWS-forbindelsen.

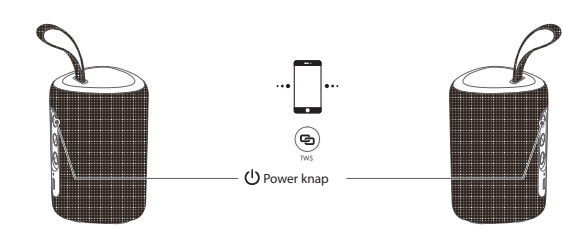

04

BETJENINGSINSTRUKTIONER

5. Håndfri funktion
Når du modtager et opkald, kan du trykke kort på power knappen for at besvare opkaldet. For at afvise opkaldet kan du trykke kort to gange. Under et opkald, kan du også lægge på, ved igen at trykke kort på power knappen.

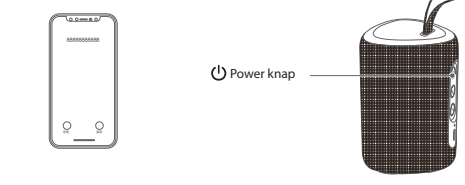


05

BETJENINGSINSTRUKTIONER


6. Strømbesparelse
Hvis højttaleren ikke har en Bluetooth*-forbindelse i mere end 10 minutter, slukker den automatisk for at spare på strømmen;
Langt tryk på "⏻" i 2-3 sekunder for at tænde igen, hvis højttaleren slukkede pga manglende paring eller afspilning.

7. Opladning
Bemærk:
• Benyt venligst en certificeret adapter
• Alle normale USB-opladere kan benyttes. Vi anbefaler 5V/1A eller over 1A
1. Oplad venligst højttaleren, når den har lavt batteri.
2. Højttaleren lyser rødt når den oplades. Når den er fuldt opladt, stopper det røde lys.

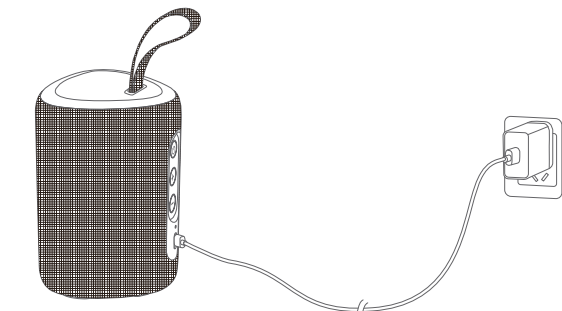

06

HØJTALERENS FUNKTIONER

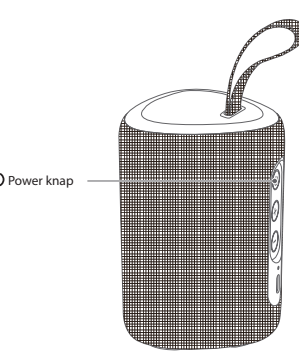

07

PARRINGSTIL- STAND	Standardtilstanden, når du tænder din højttaler, er Bluetooth*-søgningsstilstand. LED-indikatoren blinker hurtigt.
BLUETOOTH*	Efter en Bluetooth*-forbindelse, lyser LED-indikatoren konstant blåt
OPPLAD- NINGSTATUS	Højttaleren lyser rødt når den oplades. Når den er fuldt opladt, stopper det røde lys.
LAVT BATTERI	Ved lavt batteri, blinker højttaleren med rødt lys.

PRODUKT SPECIFIKATIONER

Produkt navn	Sinox Lifestyle
Modelnavn	SXL4020 / SXL4021
Bluetooth* version	5.0
Batterikapacitet	3.7V/1200mAh
Afspilningstid	10~12 timer(50% Volume)
Opladningstid	2 timer
Højttalerenhed	6W 4Ω
Spænding	5V ≡ 1A
Størrelse	75 x 75 x 110mm
Vægt	266g±50

08

OFTTE STILLE SPØRGSMÅL

Q1: Hvilken oplader skal bruges til højttaleren?
A: Alle normale USB-C opladere kan benyttes. Vi anbefaler 5V/2A eller over 2A.
Q2: Hvad skal jeg gøre, hvis der er støj under afspilningen?
A: Højttaleren kan normalt benyttes med 10 meters afstand. Hvis afstanden er mere end 10 meter, kan der opstå støj under afspilningen.
Q3: Hvorfor slukker højttaleren automatisk?
A: Hvis højttaleren har skiftet i Bluetooth*-parringstilstand i mere end 10 minutter uden aktivitet, slukker den automatisk for at spare på strøm.
Q4: Hvorfor kan jeg ikke forbinde højttaleren gennem Bluetooth* med min enhed, som før har været forbundet?
A: Hvis dette sker, skal du fjerne højttaleren fra Bluetooth*-listen på din enhed. Herefter kan de forbindes igen.
Q5: Hvorfor kan højttaleren ikke startes op normalt?
A: Tilstedt venligst opladeren og prøv om et par minutter, eller prøv at trykke længe på tænd/sluk-knappen for at nulstille.

Notes:
1. Læs venligst denne manual grundigt og gem den herefter.
2. Oplad venligst højttaleren inden brug.
3. Benyt venligst en certificeret adapter.
4. Hvis du ikke bruger højttaleren i lang tid, kan du vedligeholde den, ved at oplade den mindst én gang om måneden.
5. Undlad at benytte højttaleren ved ekstremt kolde eller varme temperaturer (5°C-35°C). Hvis du benytter højttaleren i ekstremt kolde eller varme tilstande, kan den slukke automatisk for at beskytte højttalerens funktionalitet.
6. Hvis du oplader højttaleren ved ekstremt varme temperaturer, kan den stoppe opladningen for at beskytte højttalerens batteri. Her lyser LED-indikatoren oftest hurtigt, for at vise at der er for varmt.
7. Opbevaringstemperatur: 5°C-35°C RH<70% (anbefalet 25°C±5°C).

Vigtige sikkerhedsinstruktioner:
1. Lad være med at skille højttaleren fra hånden, da dette kan forårsage produkt- eller personskader.
2. Benyt ikke højttaleren i ekstremt støvede, fugtige, tære eller varme tilstande.
3. Placer ikke højttaleren tæt på en varmekilde, i direkte sollys eller et sted med meget stiv eller mekaniske vibrationer.
4. For at mindske risikoen for brand, bedes du venligst undlade at tilslutte højttaleren med afspalningskabler eller lignende under brug.
5. Hvis produktet har en vandtæt funktion, skal du venligst ikke overskride det normale parameterområde, når du bruger det.
6. Hvis produktet beskadiges (hvis strømkablet går i stykker etc.), skal det repareres.
7. Når højttaleren er fuldt opladt, skal det ikke kobles til opladeren igen.
8. Den maksimale omgivende temperatur bør ikke overstige 40°C.

*Denne højttaler kan anvendes med mobil/tablets/bærbare computere osv. Manualen tager udgangspunkt i anvendelse med en mobil.

09