


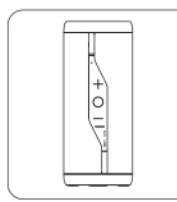
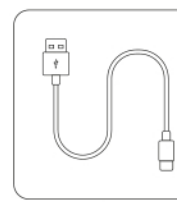
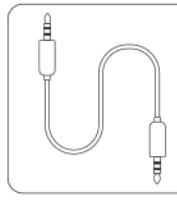

# SXL4050 Manual 770\*90mm




**Sinox Europe A/S**  
Troensevej 11, DK-9220 Aalborg

### BLUETOOTH SPEAKER AND ACCESSORIES

A. Bluetooth speaker  
B. Charging cable  
C. 3.5mm AUX cable  
D. User manual

### BASIC FUNCTIONS

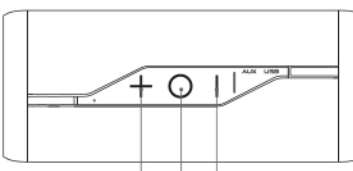

① Power Button (Power on/off)  
② + Volume  
③ - Volume

Long press for 2-3s: Power on/off  
Short press: Play/ Pause  
Double press quickly: Mode switching  
Default BT mode when power on (BT-AUX)

Short press: Volume +  
Short press: Volume -

### OPERATION GUIDE



#### 1. Power on/off

Long press power button "○" for 2-3 seconds to power on/off.

#### 2. Bluetooth Mode

It will enter to Bluetooth mode after power on, and the blue indicator light will flash.

Turn on your device, search for "SXL4050" from your Bluetooth list and click on connect. You will hear voice prompt once connect successfully, and the blue indicator light will long on. Then you can start to play your music. Press the "○" button 3 times to disconnect the Bluetooth.
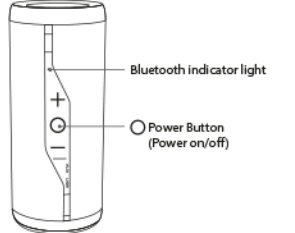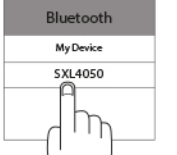
### OPERATION GUIDE


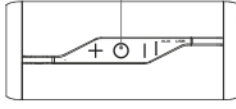
#### 3. Volume control

Short press "+" to increase volume, short press "-" to decrease volume; When the volume increase to maximum, you will hear "Beep" voice prompt.

- Previous/ next song control: Long press "+" for 2 seconds to play next song, long press "-" for 2 seconds to play previous song on Bluetooth mode.
- Operation on playing status: When on Bluetooth mode, short press "○" to pause playing, press again to start playing; When on AUX mode, short press "○" to mute, press again to unmute.

#### 4. Hands free function


Using your mobile phone to call when it's connected with SXL4050, SXL4050 will enter Hands free mode automatically. When there is an incoming call, short press "○" to answer the call/ short press again to hang up the call/ double press to reject the call.

### OPERATION GUIDE

#### 5. TWS connection

If you have two SXL4050, power on both of them, they will enter to Bluetooth mode. Short press each of their "+" "-" button, the two speakers will connect with each other automatically. After they connected successfully, the sub-master SXL4050's blue indicator light will long on, the master SXL4050's blue indicator light will keep flashing. Follow point 2 (point 2 above) to conduct Bluetooth connection, after successful connection, you can start to play the music and enjoy stereo sound.

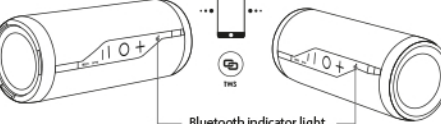


Bluetooth indicator light

Remark:  
1. TWS function needs two SXL4050, and both of them are in Bluetooth status.  
2. Do not connect with other Bluetooth devices if you want to make TWS connection.

### OPERATION GUIDE

#### 6. AUX audio input

Put the 3.5mm audio cable into AUX port of SXL4050, the speaker will switch to AUX mode automatically. Connect the other side with your phone or PC, then you can start to play music.

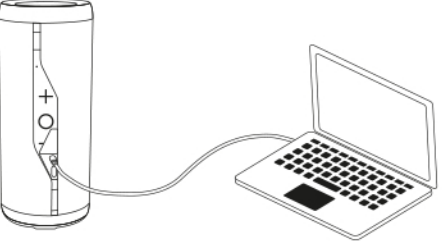


### OPERATION GUIDE

#### 8. Charging


**Important tips:**

- Do not use power adapter without safety certification.
- Suggest to use output 5V/1.5A (or above 1.5A) adapter to charge.

1. Please charge SXL4050 ASAP when you hear low battery voice prompt.  
2. The red indicator light will on while charging, and it will off when full charge.

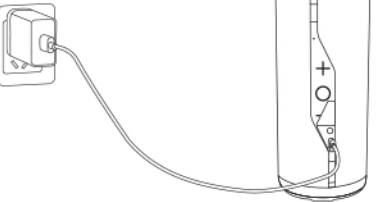

### FUNCTIONS OPERATION

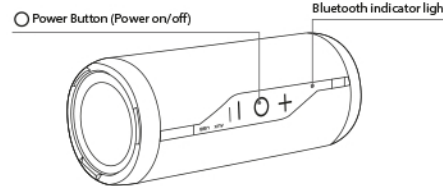

<b>Power on</b>	Blue indicator light will quick flash when on Bluetooth devices searching status, blue indicator light will on when connect successfully. When connected by 3.5mm audio cable, then there will be a voice prompt, blue indicator light will flash slowly when playing.
<b>Bluetooth mode</b>	Blue indicator light keeps flashing if your Bluetooth devices out of range. Blue indicator light keeps flashing if disconnect. (on searching status)
<b>TWS</b>	There will be a prompt tone when enter TWS function, the blue indicator light of the master SXL4050 will flash, the sub-master SXL4050's blue indicator light will long on.
<b>Charging</b>	Red indicator light will on while charging; red indicator light will off when charging finished.
<b>Low battery</b>	When low battery, there is a low battery prompt tone.
<b>Low battery power off</b>	when there is no power, SXL4050 will power off automatically.

### SPECIFICATIONS

Product Name	Sinox Lifestyle
Model Name	SXL4050
Bluetooth Version	5.0
Battery Capacity	2000mAh
Playing Time	10~12 hours(50% Volume)
Charging Time	2~3 hours
Speaker Unit	8Wx2
Charging Current	5V≡1A
Product Size	180 x 75 x 75mm
Product Weight	573.5±50

### FREQUENTLY ASKED QUESTIONS

Q: What kind of charger should we use for the speaker?  
A: All common USB chargers can be used, while we suggest the ones 5V/2A or above 2A.

Q: What if there is noise or discontinuous sound during playing?  
A: The speaker can be normally used within 10m under no obstruction environment. If it is beyond 10m or with obstruction, there might be noise or discontinuous sound.

Q: Why the speaker power off automatically after power on but no Bluetooth disconnection?  
A: When there is no Bluetooth pairing in 10 minutes, the speaker will shut down automatically to reduce power consumption.


Q: Why does the speaker cannot connect the second paired cellphone?  
A: First, remove the speaker's paired name from the cellphone's Bluetooth List and then restart pairing.

Q: What is the working sequence of the speaker?  
A: Default mode is Bluetooth mode but when insert in AUX in cable, it will be AUX in mode.  
Q: The speaker cannot be started up in a normal situation.  
A: Please plug in the charger and try a few minutes or try to long press power button 10-30s to reset.

Notes:  
1. Please read the manual carefully before use and keep it properly.  
2. For the first use, please fully charge the product.  
3. Please use certified adapter that has passed national safety certification.  
4. If you do not use the product for a long time, be sure to charge it once within a month at least to maintain its performance.  
5. Do not use this product in an extremely cold or hot environment, such as temperature beyonds the range of 5°C-35°C. If use it beyond the above range, the product may stop automatically to protect the internal circuit.  
6. When charging it in a high temperature environment, the product may automatically stop charging to protect the battery. At this time, the charging indicator usually flashes quickly to indicate that the charging environmental temperature or the product internal temperature is too high.  
7. Storage environment temperature: -5°C~35°C RH<70% (recommended 25°C±5°C).

Important safety instructions:  
1. Do not disassemble or repair this speaker personally, otherwise it may cause product damage or personal injury.  
2. Do not use it in dusty, humid, dry, and high-temperature environment.  
3. Do not place this product near a heat source, or a place with direct sunlight, a lot of dust, or mechanical vibration.  
4. In order to reduce the risk of fire, please do not cover this product with newspapers, tablecloths, curtains etc., during use.  
5. If the product has a waterproof feature, please do not exceed the nominal parameter range when using it.  
6. When the product is damaged such as the power cord or plug is damaged, liquid enters or objects fall into the device, unable to operate normally or falls, it must be repaired.  
7. When the product is fully charged, do not connect it to the charger for further long time charging.  
8. The maximum ambient temperature should not exceed 40°C.





This speaker supports mobile phones/tablets/PC etc. Here this User Manual is illustrated base on mobile phones.




**Sinox Europe A/S**  
Troensevej 11, DK-9220 Aalborg

### INKLUDERER

A: Bluetooth® højttaler  
B: Opladningskabel  
C: 3,5mm AUX-kabel  
D: Brugermanual
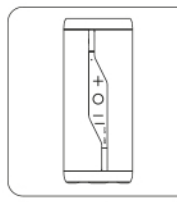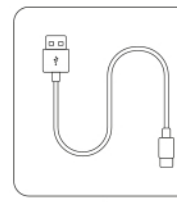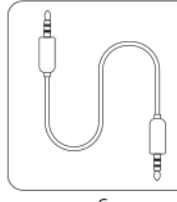
### BASALE FUNKTIONER

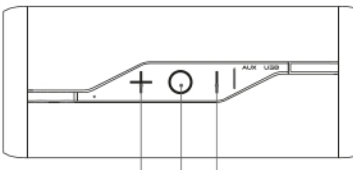

① Power knap (tænd/sluk)  
② + Lydstyrke  
③ - Lydstyrke

Hold inde i 2-3 sekunder: Tænd/sluk højttaleren  
Kort tryk: Play/pause  
To korte tryk: Skifter mellem funktioner (Bluetooth® og AUX)

Kort tryk: Højere lydstyrke  
Kort tryk: Lavere lydstyrke



### BETJENINGSINSTRUKTIONER

#### 1. Sluk/tænd

Hold "○" -knappen inde i 2-3 sekunder for at tænde eller slukke.

#### 2. Bluetooth®-tilstand

Når højttaleren tændes, går den i Bluetooth®-parings tilstand og LED-indikatoren blinker med blåt lys. Vælg "SXL4050" på din enheds Bluetooth®-liste. Når der er forbindelse, siger højttaleren en kort lyd og LED-indikatoren lyser konstant blåt. Du kan nu afspille din musik. Tryk på "○" -knappen tre gange for at afbryde Bluetooth®-forbindelsen
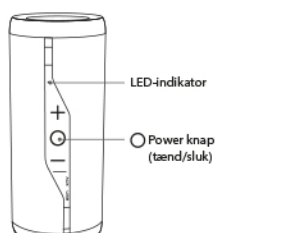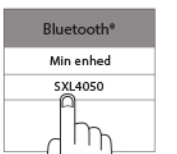
### BETJENINGSINSTRUKTIONER



#### 3. Lydstyrke

Tryk kort på "+" for højere lydstyrke. Tryk kort på "-" for lavere lydstyrke. Når lydstyrken når sit maksimum, siger højttaleren en kort bip-lyd.

- Førrige/næste sang: Hold "+" inde i 2-3 sekunder, for at afspille den næste sang og hold "-" inde i 2-3 sekunder, for at afspille den forrige sang i Bluetooth®-tilstand.
- Afspilningsstatus: Ved Bluetooth®-tilstand skal du trykke kort på "○" for at pause eller genstarte afspilningen; Ved AUX-tilstand skal du trykke kort på "○" for at for at pause eller genstarte afspilningen.

#### 4. Håndfri funktion


Når din enhed er forbundet med højttaleren, kan du berytte dig af den håndfri funktion. Du kan trykke kort på "○" for at besvare eller afslutte et opkald. Du kan også afvise opkaldet, ved at trykke på "○" to gange.
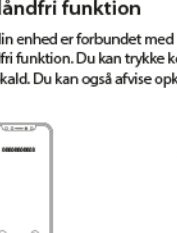
### BETJENINGSINSTRUKTIONER

#### 5. TWS-forbindelse

Du kan forbinde to højttalere ved at tænde dem og trykke på en af "+/-"-knapperne på en af højttalerne. Når de to højttalere er forbundet, vil submaster-højttaleren lyse konstant blåt, mens master-højttaleren vil blinke med et blåt lys. Herefter kan du oprette en Bluetooth®-forbindelse mellem din enhed og de to højttalere, som ved punkt 2. og du kan nu berytte "Stereo Bluetooth® Speaker"

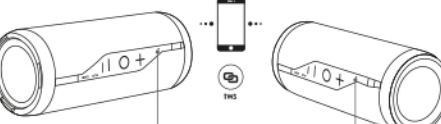


Bluetooth® LED-indikator

Remark:  
1. For at opnå en TWS-forbindelse, skal du have to SXL4050 højttalere, og de skal begge være i Bluetooth®-tilstand.  
2. Lad være med at forbinde med andre Bluetooth® enheder, hvis du vil opnå en TWS-forbindelse

### BETJENINGSINSTRUKTIONER

#### 6. AUX input

Indsæt det inkluderede 3,5mm AUX-lydkabel i højttaleren, som automatisk skifter til AUX-tilstand. Den anden ende af AUX-kablet kan du indsatte i en mobil eller PC, som du nu kan spille musik fra.

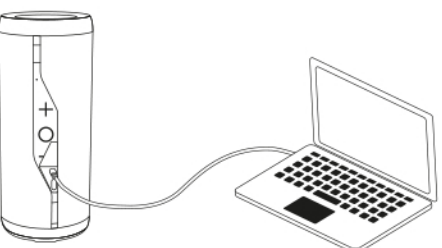


### BETJENINGSINSTRUKTIONER

#### 8. Opladning


**Vigtigt:**

- Benytt ikke en oplader, som ikke er sikkerheds-certificeret.
- Vi anbefaler en oplader med output 5V/1,5A (eller mere end 1,5A).

1. Oplad venligst højttaleren med det samme, hvis du hører en notifikation for lavt strømiveau.  
2. Højttaleren lyser rødt når den oplades. Når den er fuldt opladt, stopper det røde lys.

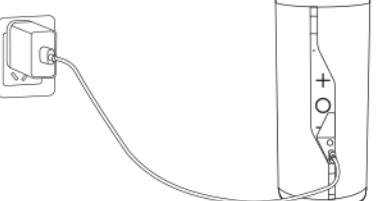

### HØJTALERENS FUNKTIONER

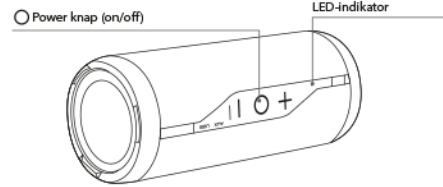

<b>PAR-RINGSTIL- STAND</b>	Under en Bluetooth®-parings tilstand, blinker LED-indikatoren med blåt lys. Efter en Bluetooth®-forbindelse, lyser LED-indikatoren konstant blåt. Når AUX-kablet forbindes, siger højttaleren en kort lyd. LED-indikatoren blinker langsomt med blåt lys, når der spilles musik.
<b>BLUE- TOOTH®</b>	LED-indikatoren blinker med blåt lys, hvis din enhed har for meget afstand til højttaleren. Indikatoren blinker også, hvis Bluetooth®-forbindelsen er afbrudt.
<b>TWS</b>	Ved brug af TWS-funktionen, lyder en kort notifikation.
<b>OPLAD- NING LAVT BATTERI</b>	Højttaleren lyser rødt når den oplades. Når den er fuldt opladt, stopper det røde lys. Ved lavt batteri, lyder en kort notifikation.
<b>SLUKKET</b>	Højttaleren slukker automatisk, når den ikke har mere strøm.

### SPECIFIKATIONER

Produkt navn	Sinox Lifestyle
Model navn	SXL4050
Bluetooth® version	5.0
Batterikapacitet	2000mAh
Afspilningstid	10~12 timer(50% Volume)
Opladningstid	2~3 timer
Højttalerenhed	8Wx2
Spænding	5V≡1A
Størrelse	180 x 75 x 75mm
Vægt	573.5±50

### OFTE STILLEDE SPØRGSMÅL

Q: Hvilken oplader skal bruges til højttaleren?  
A: Alle normale USB-oplader kan benyttes. Vi anbefaler 5V/2A eller over 2A.

Q: Hvad skal jeg gøre, hvis der er støj under afspilningen?  
A: Højttaleren kan normalt benyttes med 10 meters afstand. Hvis afstanden er mere end 10 meter, kan der opstå støj under afspilningen.

Q: Hvorfor slukker højttaleren automatisk?  
A: Hvis højttaleren har været i Bluetooth®-parings tilstand i mere end 10 minutter uden aktivitet, slukker den automatisk for at spare på strømmen.

Q: Hvorfor kan jeg ikke forbinde højttaleren gennem Bluetooth® med min enhed, som har været forbundet?  
A: Hvis dette sker, skal du fjerne højttaleren fra Bluetooth®-listen på din enhed. Herefter kan de forbindes igen.

Q: Hvad er højttalerens standardtilstand?  
A: Højttalerens standardtilstand er Bluetooth®-tilstand, men hvis du indtaster et AUX-kabel, er højttaleren i AUX-tilstand.

Q: Hvorfor kan højttaleren ikke startes op normalt?  
A: Tildelt venligst opladeren og prøv om et par minutter, eller prøv at trykke længe på tænd / sluk-knappen for at tænde den.

Notes:  
1. Læs venligst denne manual grundigt og gem den herefter.  
2. Oplad venligst højttaleren inden brug.  
3. Benyt venligst en certificeret oplader.  
4. Hvis du ikke bruger højttaleren i lang tid, kan du vedligeholde den, ved at oplade den mindst én gang om måneden.  
5. Undgå at benytte højttaleren ved ekstremt varme eller varme temperaturer (5°C-35°C). Hvis du benytter højttalerens batteri, skal du oplade det ved normale temperaturer (25°C±5°C).  
6. Hvis du oplader højttaleren ved ekstremt varme temperaturer, kan den stoppe opladningen for at beskytte højttalerens batteri. Her lyser LED-indikatoren hurtigt, for at vise det er for varmt.  
7. Opladnings-temperatur: -5°C~35°C RH<70% (anbefaldt 25°C±5°C).

Vigtige sikkerhedsinstruktioner:  
1. Lad være med at adskille højttaleren fra hinanden, da dette kan forårsage produkt- eller personskade.  
2. Brug ikke højttaleren i ekstremt støvede miljøer, fugtige, tære eller varme tilstande.  
3. Placer ikke højttaleren tæt på en varmekilde / direkte sollys eller et sted med meget støv eller mekaniske vibrationer.  
4. For at mindske risikoen for brand, bedes du venligst undgå at tilslutte højttaleren med avispapir, videobånd eller lignende under brug.  
5. Hvis produktet har en vandtæt funktion, skal du venligst ikke overskride det normale parameterområde, når du bruger det.  
6. Hvis produktet beskadiges (hvis støvskåbet går i stykker etc.), skal det repareres.  
7. Når højttaleren er fuldt opladt, skal det ikke forbindes til opladeren igen.  
8. Den maksimale omgivende temperatur bør ikke overstige 40°C.

\*Denne højttaler kan anvendes med mobil/tablet/bærbare computere osv. Manualen tager udgangspunkt i anvendelse med en mobil.