SXL4070 Manual 630*90mm

SINOX LIFESTYLE

Sinox Europe A/S
Troensevej 11. DK-9220 Aalborg



SXL4070 MANUAL

BOX CONTENTS

A: Speaker
B: Micro USB Charging Cable
C: User Manual

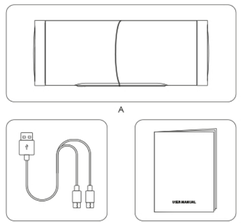

BASIC FUNCTION

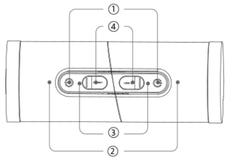

① ⏻ Power Button/Multifunction Button

Long press for 2-3s	Power on/off
Short press	Play/Pause Answer the call/end the call (when there is a call)
Double press	Reject the call(when there is a call) Disconnect the Bluetooth connection (play or connection state)
Triple press	TWS pair/disconnect

② Technical Light
③ Microphone
④ Micro USB Charging Interface

OPERATION INSTRUCTIONS

1. Power on/off

Long press power button" ⏻ " for 2-3s to power on/of.

2. Bluetooth

① After powered on, speaker will enter into bluetooth pairing mode with technical indicator flashing in blue. Find "SXL4070" in your bluetooth list and connect it. There will be a prompt tone to show the speaker is connected successfully. Meanwhile, bluetooth indicator will stop fashing and keep blue. You can feel free to play music now.



② With either speaker turned on and connected with your device, when you turn on the other speaker, it will be automatically paired to the first paired speakers with a prompt tone. You can enjoy the Stereo Bluetooth Speaker then.
Note: The first paired speaker is Master speaker and it will be left channel. The succedent paired speaker is Slave speaker and it will be right channel.

OPERATION INSTRUCTIONS

3. Volume Adjustment

Increase or decrease volume from your mobiles, there is no button to adjust volume in speaker.

4. TWS Operation

During bluetooth pairing, press" ⏻ " 3 times to activate / disconnect TWS connection. (Default mode is tws connected status).



5. Hands Free Feature

After bluetooth connection, when you make call from your mobile, speaker will enter into hands free status. You can short press " ⏻ " to answer a call and short press" ⏻ " to hang up. Also, you can reject the call by double press" ⏻ ".



BASIC FUNCTION

6. Micro USB Charging Interface

Important Notice:
- Pls don't use the adapter which is without security certification.
- All common USB chargers can be used, while we suggest the ones 5V/2A or above 2A.

Pls charge the speaker when you hear the low battery prompt tone. When charge the speaker, technical light will be red and off after charging complete.



7. Power Saving

Speaker will be turned off to save power when it is unconnected for above 10 minutes.

BLUETOOTH OPERATION



Power On	Default mode is bluetooth mode, technical light will fash quickly (bluetooth searching status).
Bluetooth	Indicator will keep blue after bluetooth connection.
	Indicator will flash in blue quickly during bluetooth pairing.
Charging	Indicator will keep red during charging and off after charging complete.
Low Battery	Indicator will flash in red quicky with a prompt tone.
Power Off	Speaker will be shut down when its power is lower than 5%.

PRODUCT SPECIFICATION

Product Name	Sinox Lifestyle
Model Name	SXL4070
Bluetooth Version	5.0
Battery Capacity	1500mAhx2
Playing Time	12~14 hours(50% Volume)
Charging Time	2~3 hours
Driver Units	10Wx2
Charging Current	5V⎓0.8A
Product Size	204 x 74.5 x 74.5mm
Product Weight	743g±50

FREQUENTLY ASKED QUESTIONS

Q: What kind of charger should we use for the speaker?
A: All common USB chargers can be used, while we suggest the ones 5V/2A or above 2A.
Q: What if there is noise or discontinuous sound during playing?
A: The speaker can be normally used within 10m under no obstruction environment. If it's beyond 10m or with obstruction, there might be noise or discontinuous sound.
Q: Why the speaker power off automatically after power on but no Bluetooth disconnection?
A: When there is no bluetooth pairing in 10 minutes, the speaker will shut down automatically to reduce power consumption.
Q: Why does the speaker cannot connect the once-paired cellphone?
A: First, remove the speaker's paired name from the cellphone's Bluetooth List and then restart pairing.
Q: What is the working sequence of the speaker?
A: Default mode is Bluetooth mode but when insert in AUX in cable, it will be AUX IN mode.
Q: The speaker cannot be started up in a normal situation?
A: Please plug in the charger and try in a few minutes or try to long press power button 10-30s to reset.

Notes:
1. Please read this manual carefully before use and keep it properly.
2. For the first use, please fully charge the product.
3. Pls use certified adapter that has passed national safety certification.
4. If you do not use the product for a long time, be sure to charge it once within a month at least to maintain its performance.
5. Do not use this product in an extremely cold or hot environment,such as temperature beyonds the range of 5°C-35°C. If use it beyond the above range, the product may stop automatically to protect the internal circuit.
6. When charging it in a high temperature environment, the product may automatically stop charging to protect the battery. At this time, the charging indicator usually flashes quickly to indicate that the charging environmental temperature or the product internal temperature is too high.
7. Storage environment temperature: -5°C~35°C RH < 70% (recommended 25°C±5°C).

Important safety instructions:
1. Do not disassemble or repair this speaker personally, otherwise it may cause product damage or personal injury.
2. Do not use it in dusty, humid, dry, and high-temperature environment.
3. Do not place this product near a heat source, or a place with direct sunlight, a lot of dust, or mechanical vibration.
4. In order to reduce the risk of fire, please do not cover this product with newspapers, tablecloths, curtains etc., during use.
5. If the product has a waterproof feature, please do not exceed the nominal parameter range when using it.
6. When the product is damaged such as the power cord or plug is damaged, liquid enters or objects fall into the device, unable to operate normally or fails, it must be repaired.
7. When the product is fully charged, do not connect it to the charger for further long time charging.
8. The maximum ambient temperature should not exceed 40° C.

*This speaker supports mobile phones and tablet PCs etc. Here this User Manual is illustrated based on mobile phones.

SINOX LIFESTYLE

Sinox Europe A/S
Troensevej 11. DK-9220 Aalborg



SXL4070 MANUAL

INKLUDERER

A: Højttaler
B: Micro B opladningskabel
C: Brugermanual

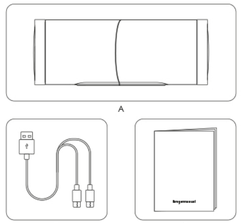

HØJTTALERENS FUNKTIONER

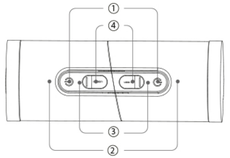

① ⏻ Power knap/Multifunktionsknap

Hold inde i 2-3 sekunder	Tænd/sluk for højttaleren
Tryk kort	Play/pause Svar på opkald/afslut opkald (under opkald)
Tryk to gange	Afvis opkald (under opkald) Afslut Bluetooth®-forbindelse
Tryk tre gange	TWS parring/afbrydelse

② LED-indikator
③ Mikrofon
④ Micro USB opladningsport

BETJENINGSINSTRUKTIONER

1. Tænd/sluk

Hold" ⏻ "-knappen inde i 2-3 sekunder for at tænde eller slukke.

2. Bluetooth®

① Når du har tændt højttaleren, vil den gå i parringstilstand og LED-indikatoren vil blinke med et blåt lys. Find og vælg "SXL4070" på din enheds' Bluetooth®-liste. Højttaleren siger en kort lyd, når der er forbindelse. Herefter lyser LED-indikatoren konstant blåt og du kan nu afspille musik.



② Når en højttaler er tændt og forbundet til din enhed, kan du automatisk forbinde endnu en højttaler bare ved at tænde den. Når de to højttalere er forbundet, lyder en kort lyd og du kan nu benytte "Stereo Bluetooth® Speaker".
Bemærk: Den højttaler, du forbinder først, er master-højttaleren, som vil fungere som den venstre højttaler. Den anden højttaler, som forbindes, er submaster-højttaleren, som vil fungere som den højre højttaler.

BETJENINGSINSTRUKTIONER

3. Lydstyrkejustering

Lydstyrken skal justeres på den enhed, som er forbundet med højttaleren. Der er ingen knapper til at justere lydstyrken på højttaleren

4. TWS-funktion

Under Bluetooth®-parring, skal du trykke på " ⏻ " tre gange for at aktivere eller afbryde TWS-forbindelsen. (Som standardtilstand er TWS aktiveret).



5. Håndfri funktion

Når din enhed er forbundet med højttaleren, kan du benytte dig af den håndfri funktion. Du kan trykke kort på " ⏻ " for at besvare eller afslutte et opkald. Du kan også afvise opkaldet, ved at trykke på " ⏻ " to gange.



BASALE FUNKTIONER

6. Micro USB opladning

Bemærk:
- Benyt venligst en certificeret adapter.
- Alle normale USB-opladere kan benyttes. Vi anbefaler 5V/2A eller over 2A.

Oplad venligst højttaleren, når den har lavt batteri. Højttaleren lyser rødt når den oplades. Når den er fuldt opladt, stopper det røde lys.



7. Strømbesparelse

Hvis højttaleren ikke er forbundet i mere end 10 minutter, slukker den automatisk for at spare strøm.

HØJTTALERENS FUNKTIONER



PARRINGS-TILSTAND	Standardtilstanden, når du tænder din højttaler, er Bluetooth®-søgningstilstand.
BLUETOOTH®	Efter en Bluetooth®-forbindelse, lyser LED-indikatoren konstant blåt.
	Under en Bluetooth®-parringstilstand, blinker LED-indikatoren med blåt lys.
OPLADNINGS STATUS	Højttaleren lyser rødt når den oplades. Når den er fuldt opladt, stopper det røde lys.
LAVT BATTERI	Ved lavt batteri, blinker højttaleren med rødt lys og siger en kort lyd.
SLUKKET	Højttaleren slukker automatisk, når den har mindre end 5%.

PRODUKT SPECIFIKATIONER

Produktnavn	Sinox Lifestyle
Modelnavn	SXL4070
Bluetooth® version	5.0
Batterikapacitet	1500mAhx2
Afspilningstid	12~14 timer(50% Volume)
Opladningstid	2~3 timer
Højttalerenhed	10Wx2
Spænding	5V⎓0.8A
Størrelse	204 x 74.5 x 74.5mm
Vægt	743g±50

OFTE STILLEDE SPØRGSMÅL

Q: Hvilken oplader skal bruges til højttaleren?
A: Alle normale USB-opladere kan benyttes. Vi anbefaler 5V/2A eller over 2A.
Q: Hvad skal jeg gøre, hvis der er støj under afspilningen?
A: Højttaleren kan normalt benyttes med 10 meters afstand. Hvis afstanden er mere end 10 meter, kan der forekomme støj under afspilningen.
Q: Hvorfor slukker højttaleren automatisk?
A: Hvis højttaleren har været i Bluetooth®-parringstilstand i mere end 10 minutter uden aktivitet, slukker den automatisk for at spare på strøm.
Q: Hvorfor kan jeg ikke forbinde højttaleren gennem Bluetooth® med min enhed, som før har været forbundet?
A: Hvis dette sker, skal du fjerne højttaleren fra Bluetooth®-listen på din enhed. Herefter kan de forbindes igen.
Q: Hvad er højttalerens standardtilstand?
A: Højttalerens standardtilstand er Bluetooth®-tilstand, men hvis du indsætter et AUX-in kabel, er højttaleren i AUX-in tilstand.
Q: Hvorfor kan højttaleren ikke startes op normalt?
A: Tilslut venligst opladeren og prøv om et par minutter, eller prøv at trykke længe på tændsluk-knappen for at nulstille 10-30s to reset.

Noter:
1. Læs venligst denne manual grundigt og gem den herefter.
2. Oplad venligst højttaleren inden brug.
3. Benyt venligst en certificeret adapter.
4. Hvis du ikke bruger højttaleren i lang tid, kan du vedligeholde den, ved at oplade den mindst én gang om måneden.
5. Hvis du benytter højttaleren ved ekstremt kolde eller varme temperaturer (5°C-35°C), vil den automatisk lukke for at beskytte højttalerens funktionalitet.
6. Hvis du oplader højttaleren ved ekstremt varme temperaturer, kan den stoppe opladningen for at beskytte højttalerens batteri. Her lyser LED-indikatoren oftest hurtigt, for at vise at der er for varmt.
7. Opbevaringstemperatur: -5°C~35°C RH<70% (anbefalet 25°C±5°C).

Vigtige sikkerhedsinstruktioner:
1. Lad være med at skille højttaleren fra hinanden, da dette kan forårsage produkt- eller personskader.
2. Benyt ikke højttaleren i støvrent støvede, fugtige, tørre eller varme tilstande.
3. Undgå at placere højttaleren tæt på en varmekilde, i direkte sollys eller et sted med meget støv eller mekaniske vibrationer.
4. For at mindske risikoen for brand, bedes du venligst undlade at tildække højttaleren med avispapir, viskestykker eller lignende under brug.
5. Hvis produktet har en vandtæt funktion, skal du venligst ikke overskride det normale parameterområde, når du bruger det.
6. Hvis produktet beskadiges [hvis strømledet går i stykker etc.], skal det repareres.
7. Når højttaleren er fuldt opladt, skal det ikke kobles til opladeren igen.
8. Den maksimale omgivende temperatur bør ikke overstige 40°C.

*Denne højttaler kan anvendes med mobiler/tablets/bærbare computere osv. Manualen tager udgangspunkt i anvendelse med en mobil.