




SWB7144 INSTALLATION INSTRUCTION

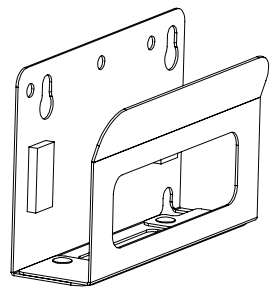

- | | | | |
|----------------------------|------------------------------------|----------------------------|----------------------|
| | | | |
| (A) M5x50 Lag Bolts x2 | (B) M8x40 Concrete wall anchors x2 | (C) soft pad (4) | |
| | | | |
| (D) M6x12 screws (2) | (E) M6 nut (2) | (F) M5/M6 washer (2) | (G) M8x12 screws (2) |
| | | | |
| (H) 5mm Plastic Sleeve (4) | (I) M8 nut (2) | (J) Allen Key / Wrench (1) | |

For Solid Brick and Concrete Mounting

STEP 1

STEP 2

For TV Standview and Other Swivel Brackets Mounting

STEP 1

STEP 2

STEP 3